Indoor Fan Removal


LCU 2023 Precedent


ID Fan Removal

Remove unit roof and rear fan access panel to allow for Fan Access.

Note: Larger units will require a ladder to access and remove the unit roof center panel and associated screws.


Note: The top will have to be removed to allow access to the fan stabilization slide out bracket.

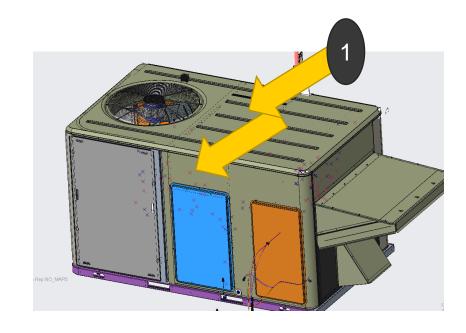


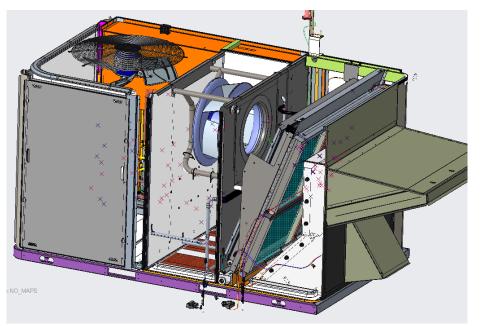




ID Fan Removal

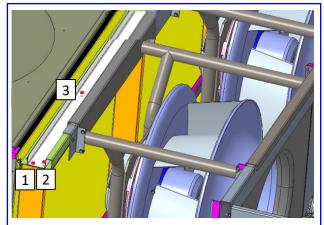


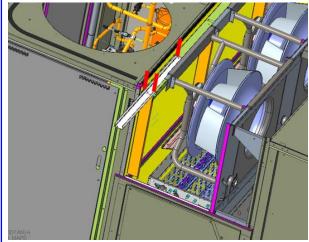


STEP 1: Remove 3 screws, relocate fan slide out bracket and resecure with 3 screws

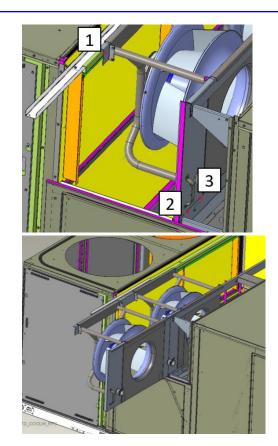



STEP 2: Remove 3 screws securing fan assembly. Then slide out ID fan assembly, to gain access to screws securing fan to orifice. (see next slide) Caution do not slide assembly beyond tipping point.

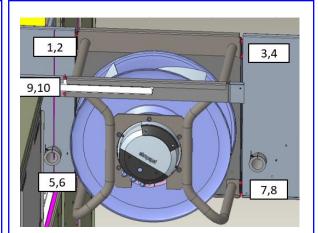

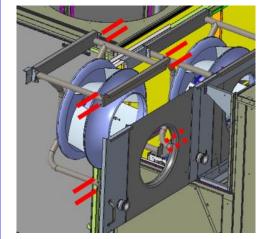

STEP 3: Remove screws 1-8 securing sides of fan to orifice and screws 9&10 securing rear bracket. Then carefully lift and pull the fan assembly from the orifice.

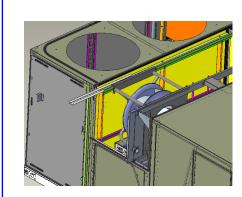

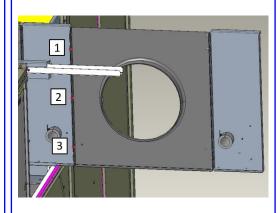

STEP 4: Remove 3 screws securing front block-off and orifice to access removal of the second fan assembly