


Armstrong Water Pump

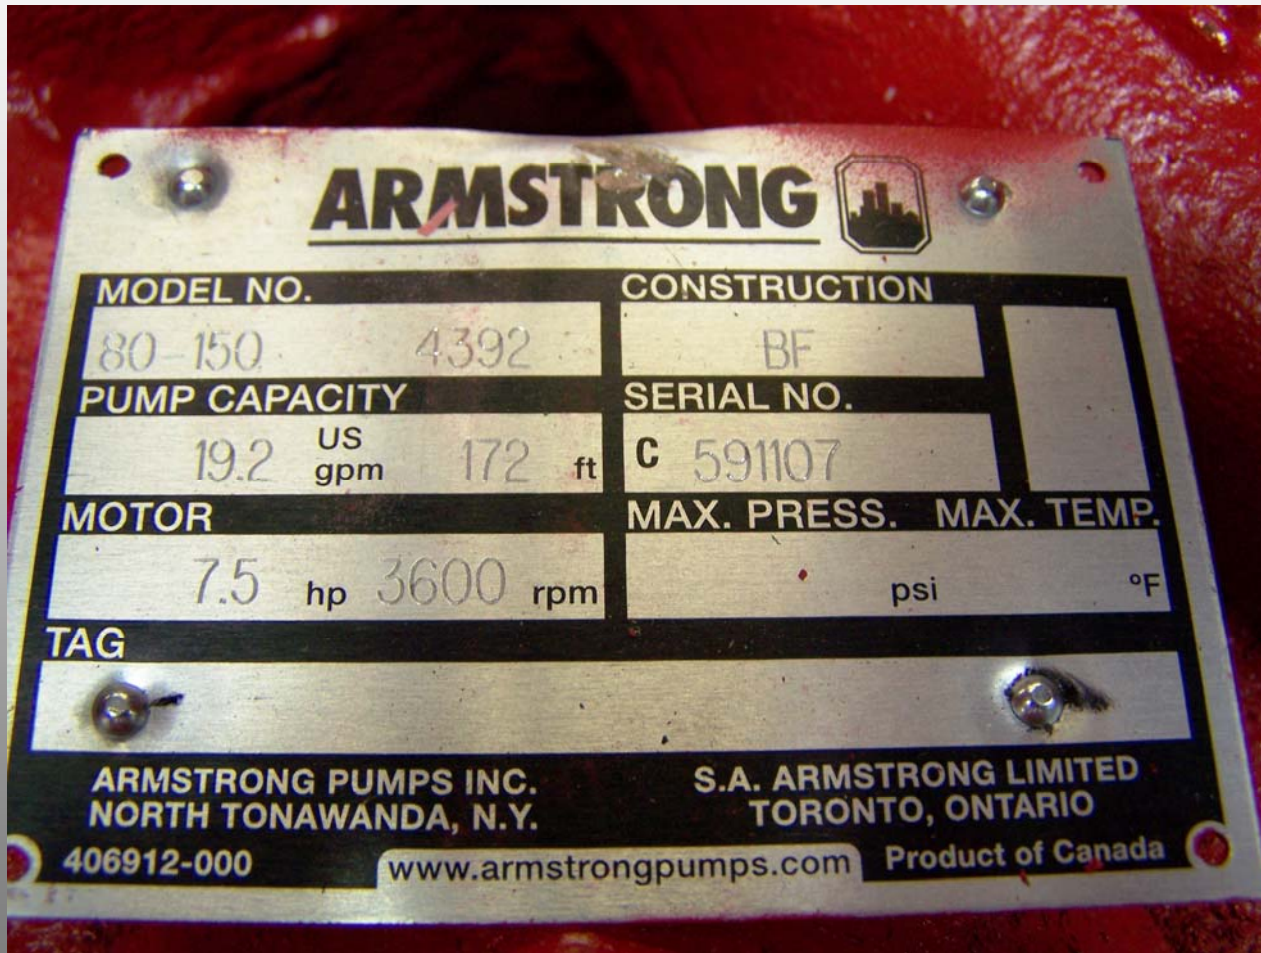


Name Plate




Pump



Remove Flushing Tube

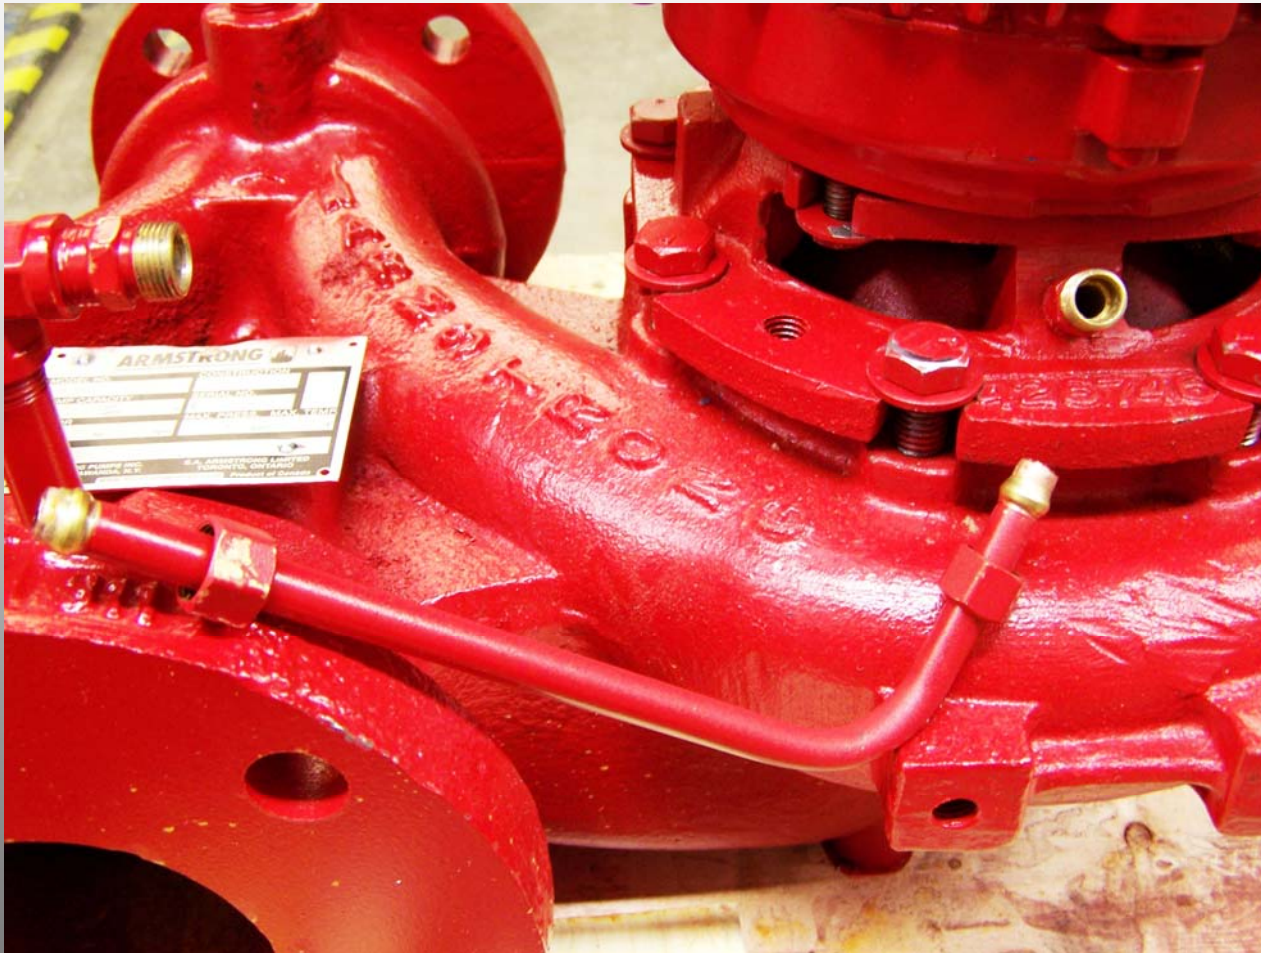


Unbolt Pump Assembly

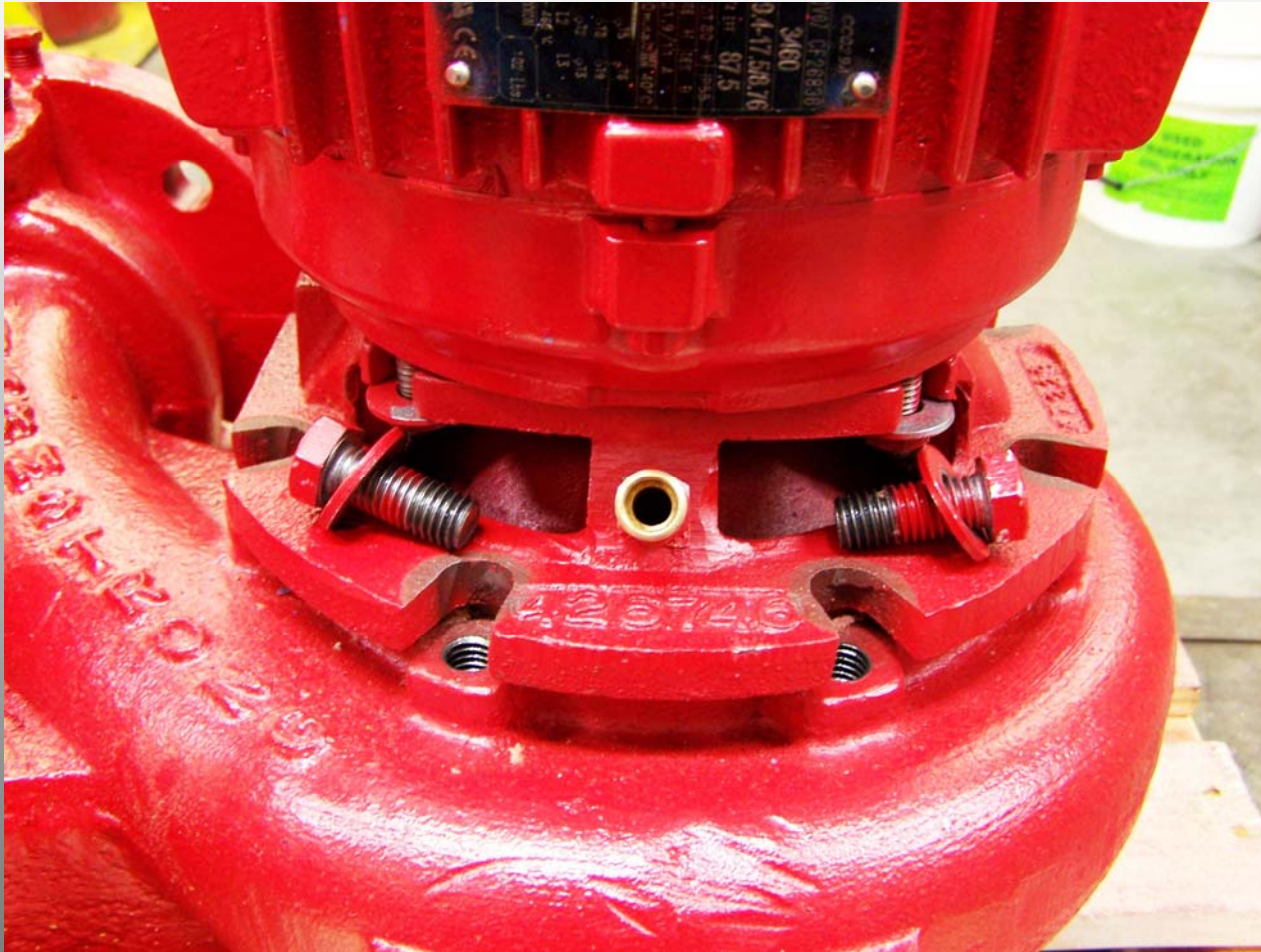


Carefully Lift Pump Motor



Pump Assembly Removed

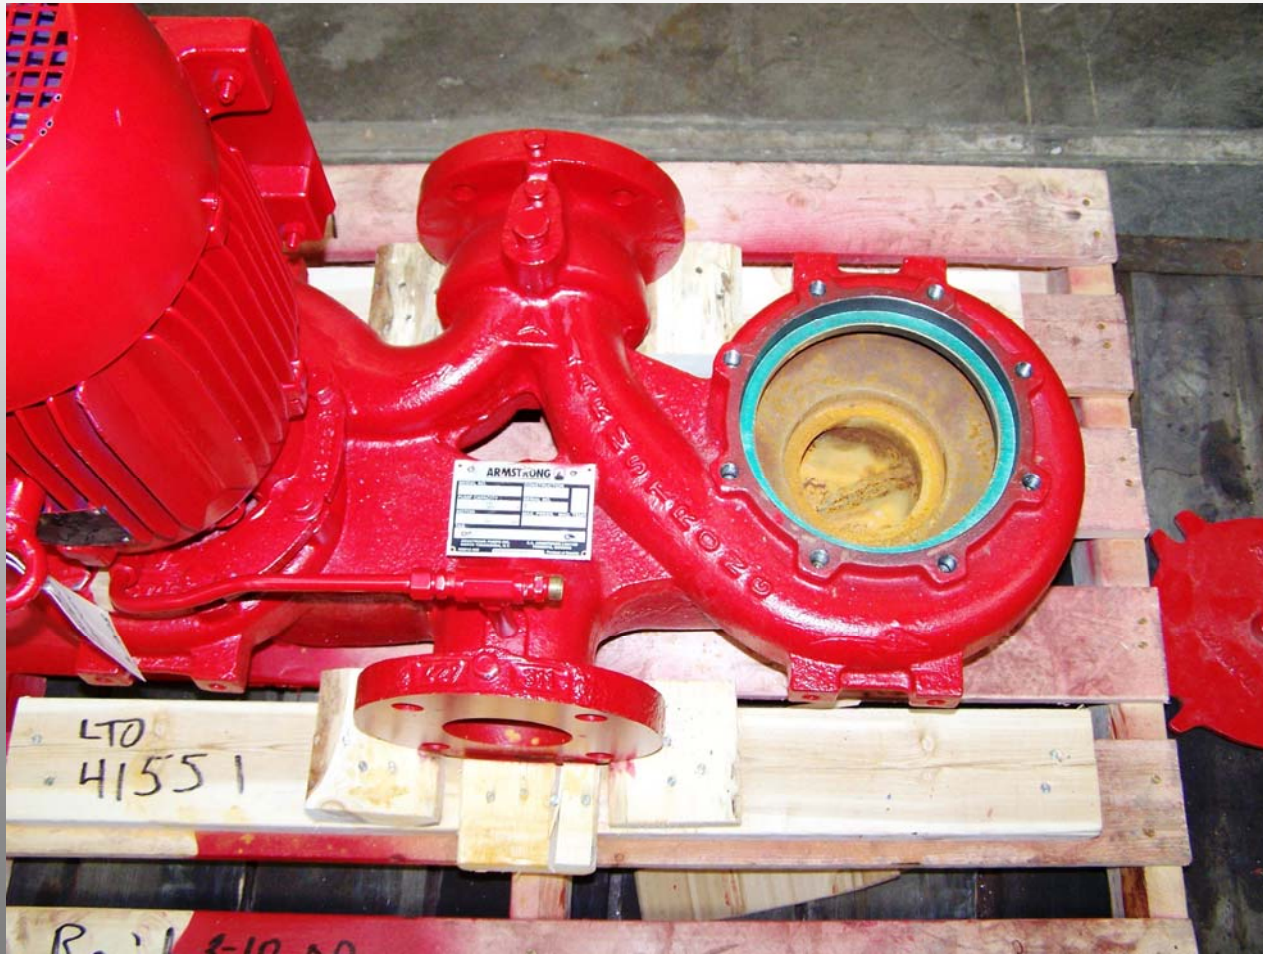

Block Off Plate

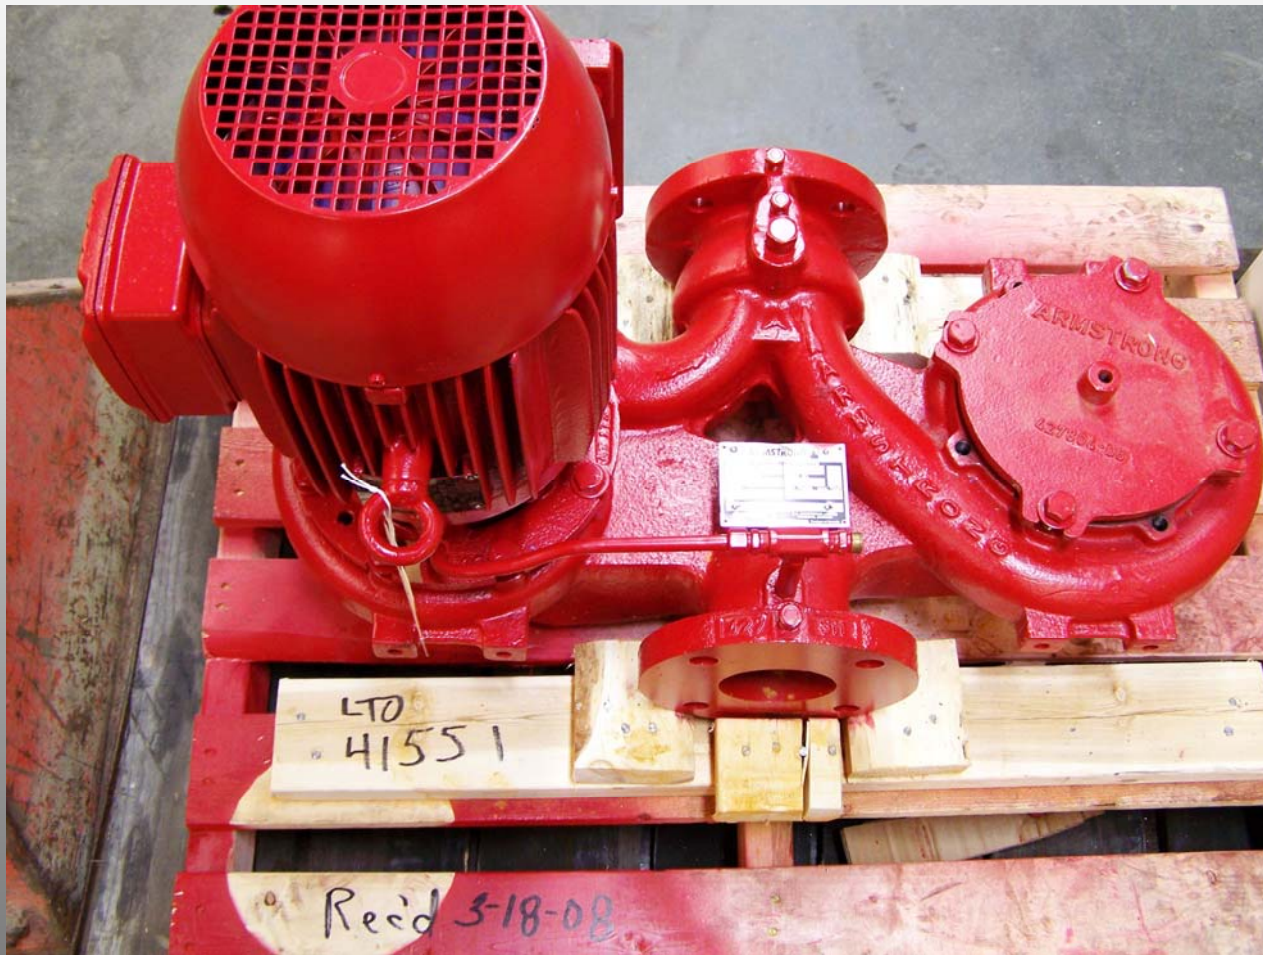


Block Off Plate Close Up

PLT04525 - 6" or PLT04526 - 8"




Pump Assembly on Table

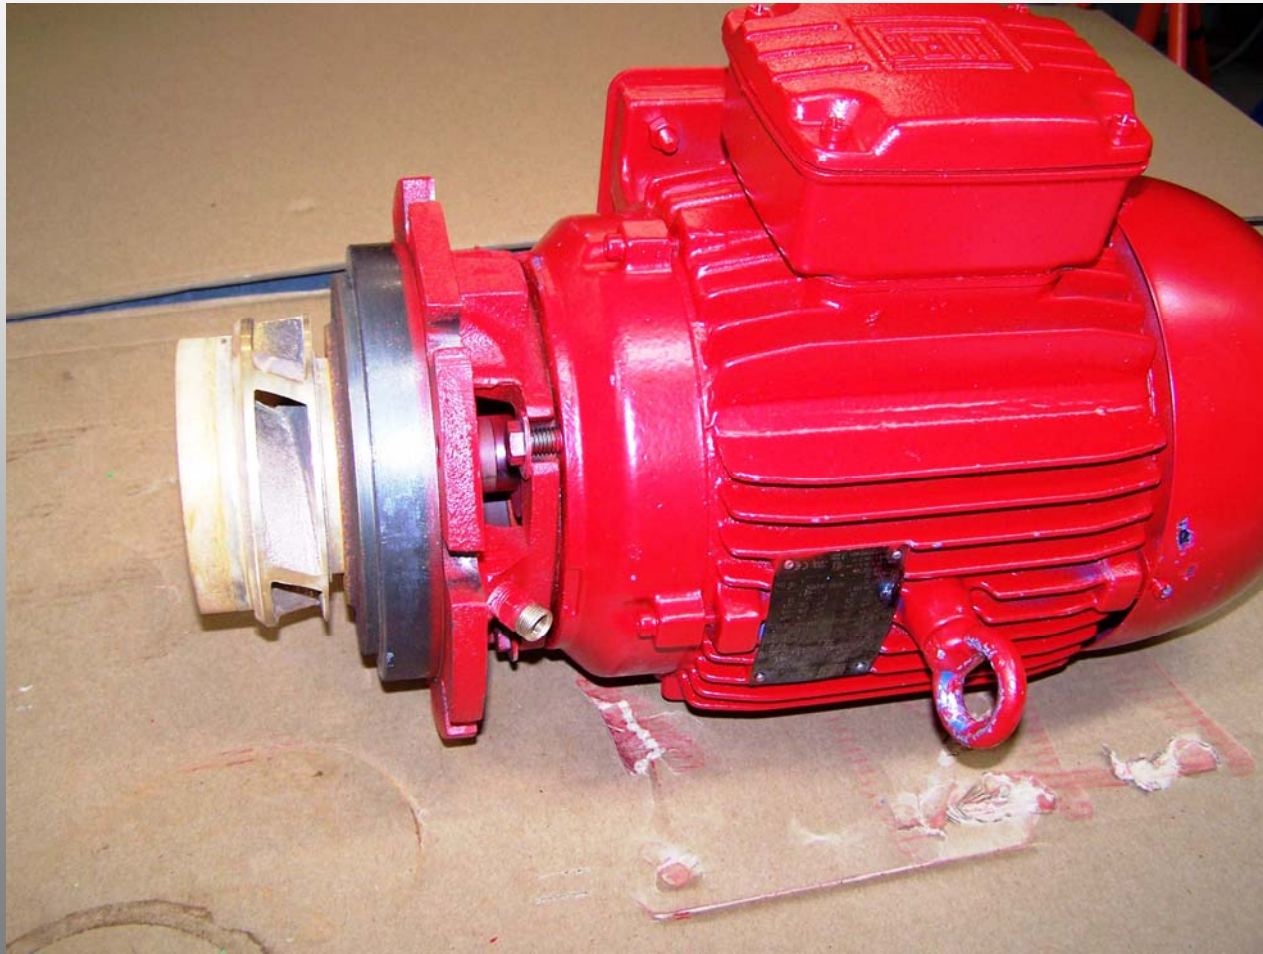


Impeller End



Remove Impeller Bolt

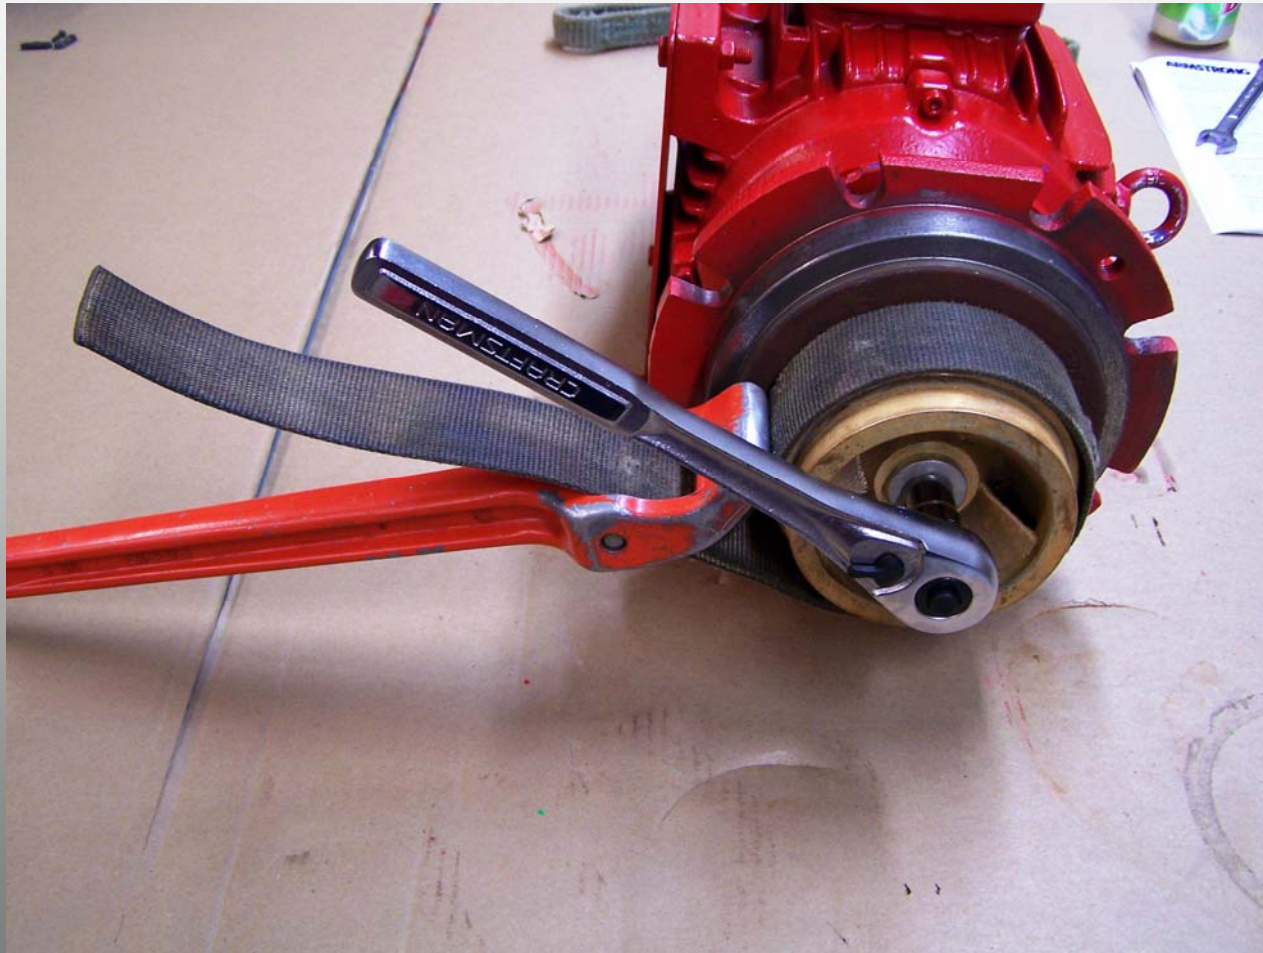


Impeller Removed

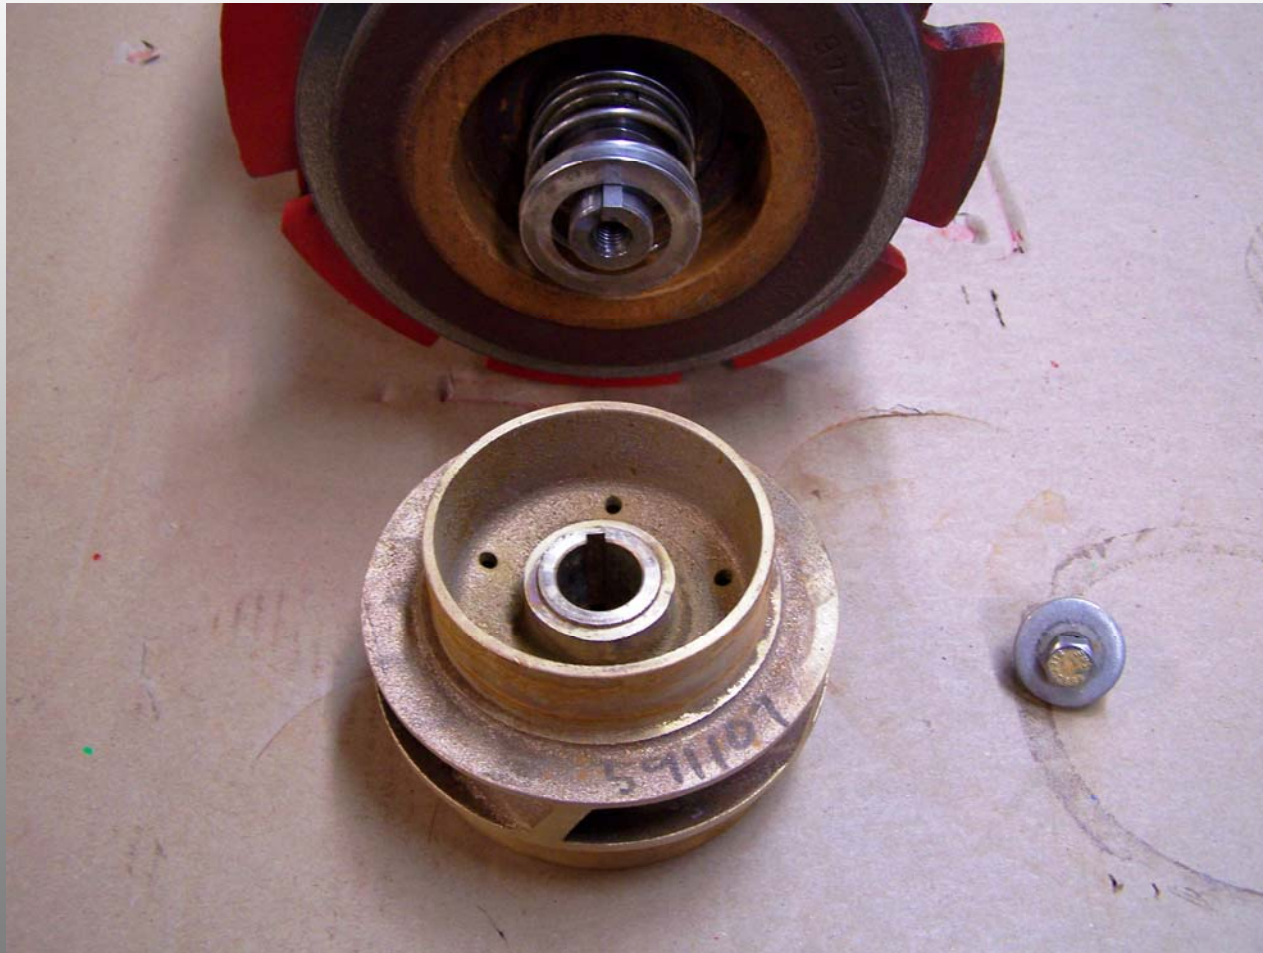


Seal Spring & Key



Unbolt Backing Plate

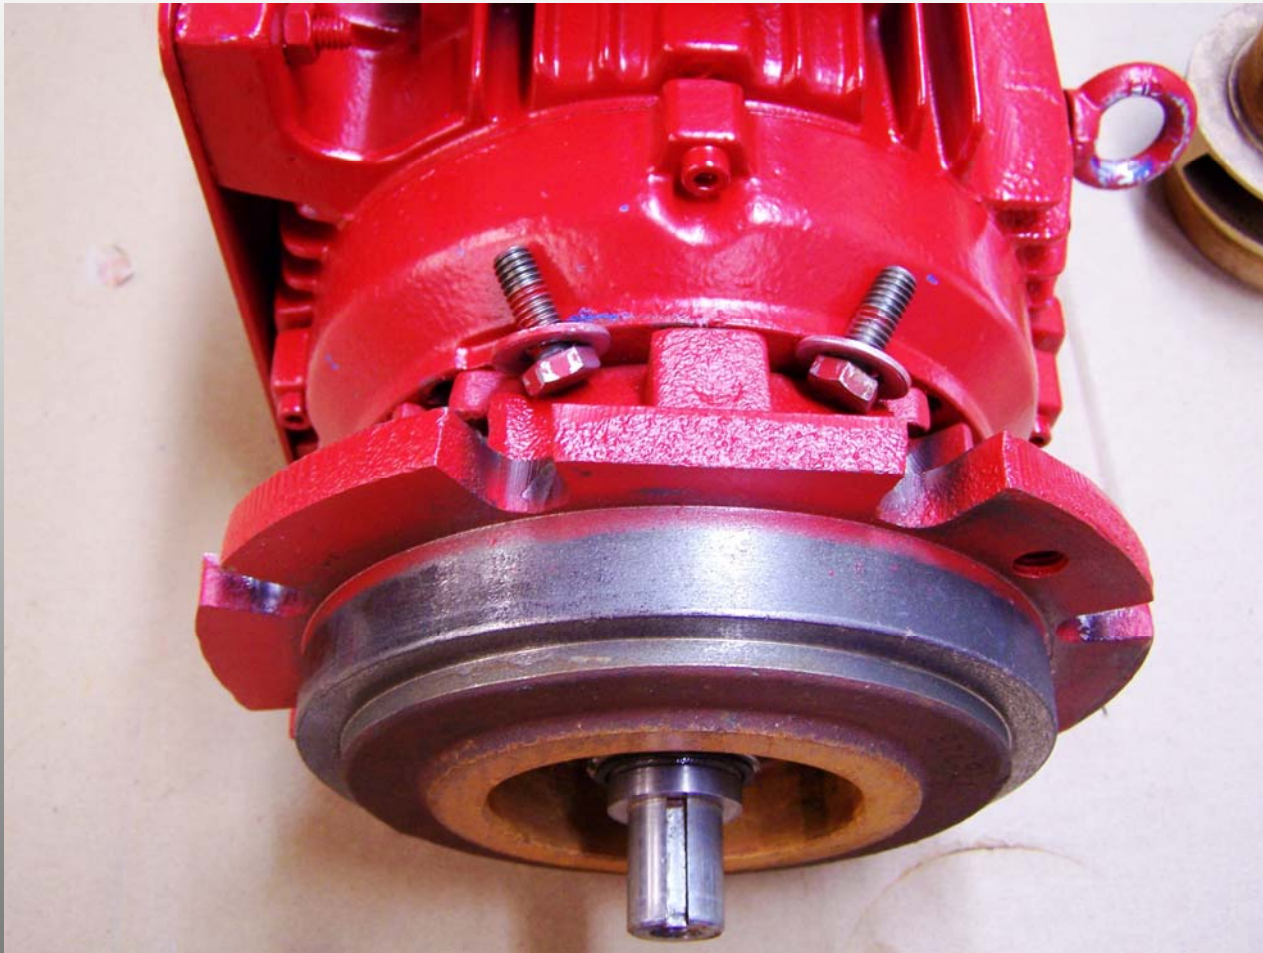


Backing Plate Removed

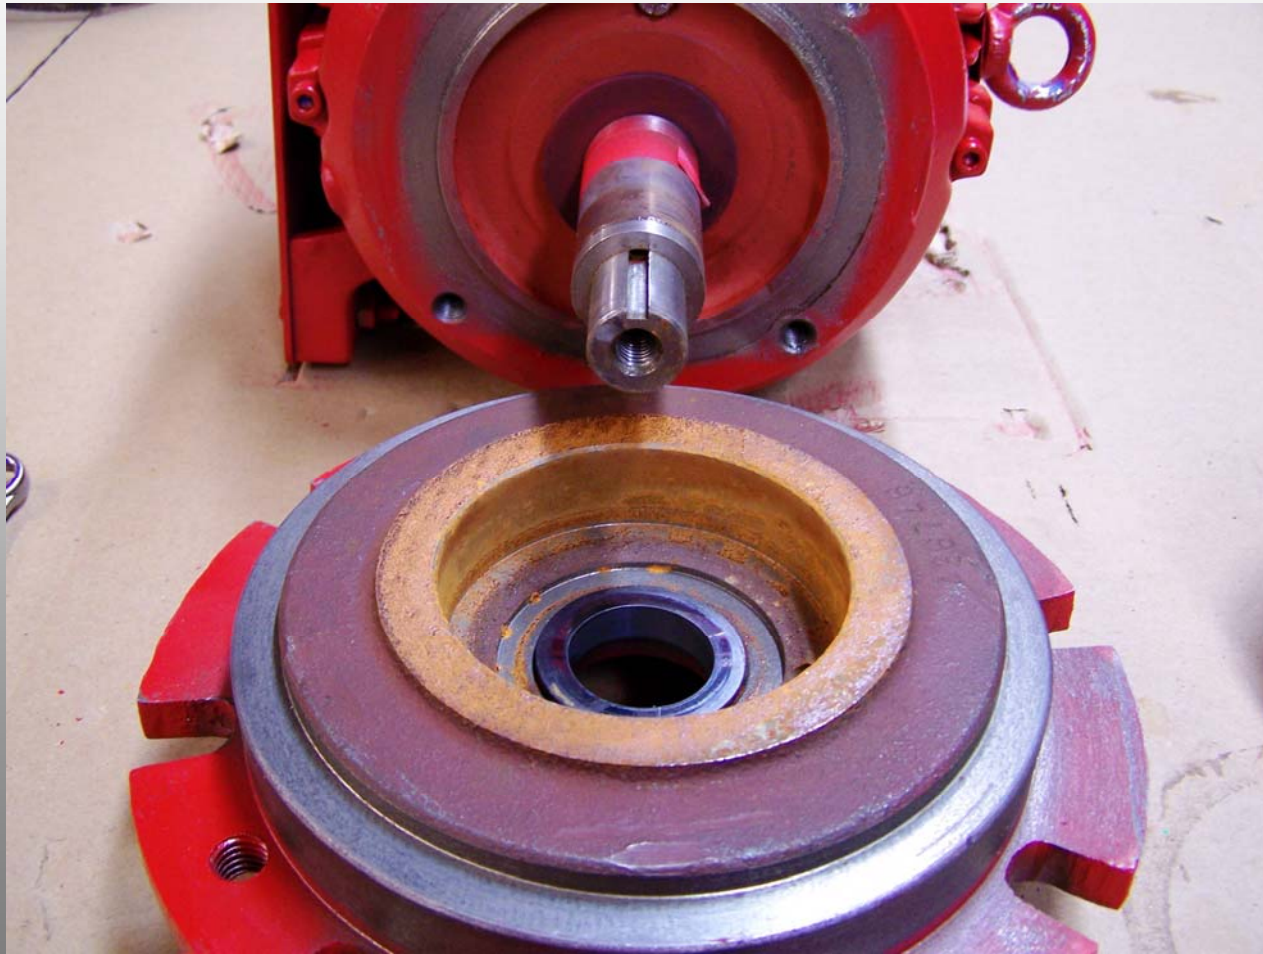

Pushing Out Seal



Impeller & Spring

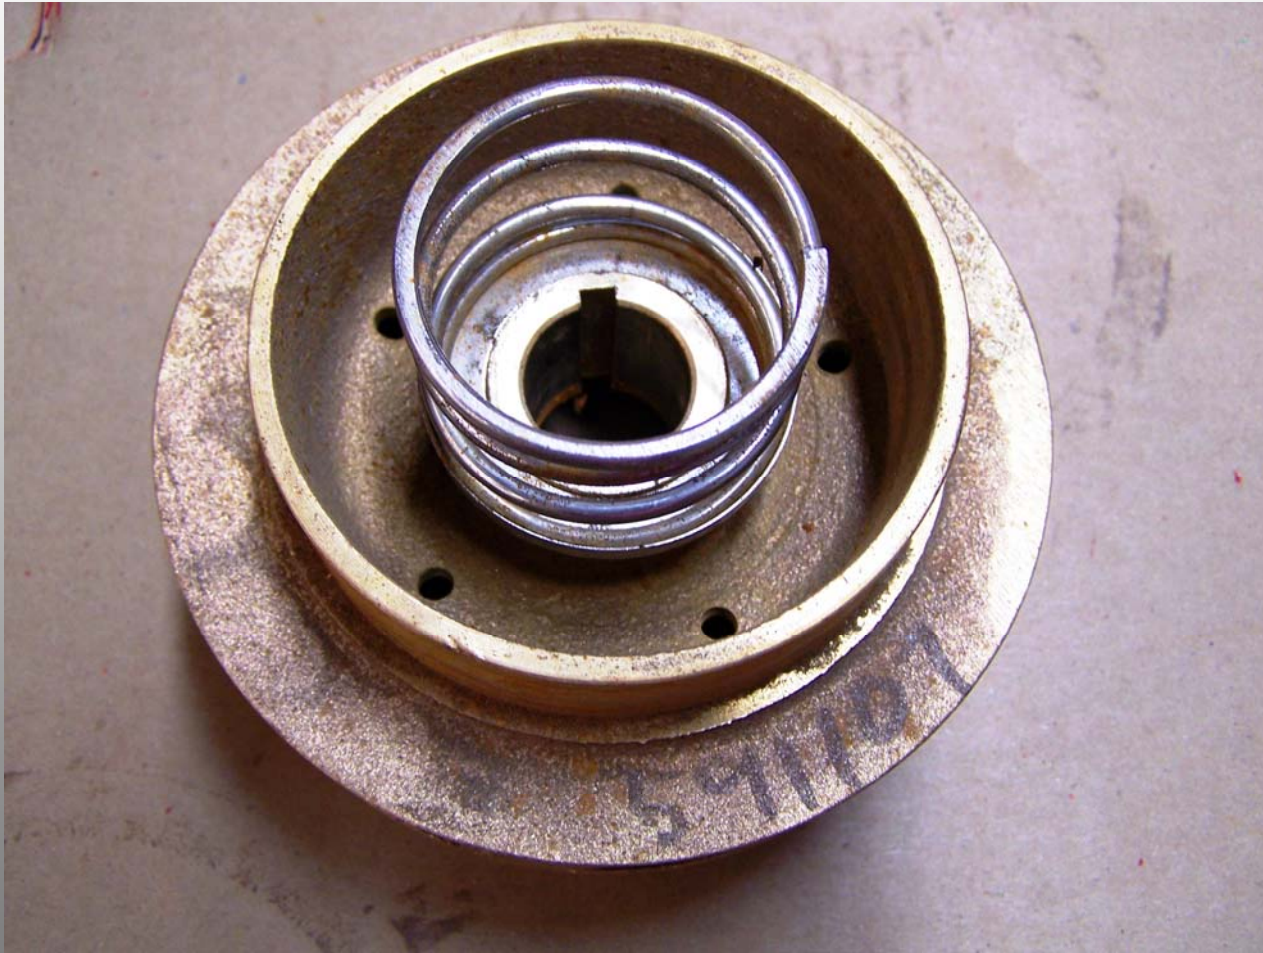

Impeller & Seal



Impeller Assembly



Pump Disassembled

