

Four zone temp sensors connected in a series parallel combination to get an average reading.  
 Three zone sensor modules with just a zone temp sensor.  
 One zone sensor module with a thumbwheel (TW) and a fan switch.

The zone sensor with the TW and the fan switch has to be in location 3 or 4.  
 The TW and the fan switch will not work if the zone sensor is in location 1 or 2.  
 There can be only one TW and one fan switch.  
 They can both be on the same zone sensor or on 2 different zone sensors.

signal	ZN Controller	Zone Sensor Module
zone temp	ZN	1
ground	GND	2
thumbwheel setpoint	SET	3
fan switch	FAN	4

